



Part Numbers and Specifications

How to select Part Numbers and Order ?

 
 
 
 
$$D1050 \underset{1}{X} - \underset{2}{X} \underset{3}{X} \underset{4}{X} - \underset{5}{X}$$

- 1 Choice of Director 1050 PLC, Standard "S", Junior "J", Nano "N"
 - 2 Power Input, "A" for AC Model, "D" for DC Model
 - 3 PLC Base, "24" for Nano, "32" for 32 Base I/O, "48" for 48 Base I/O, "64" for 64 Base I/O, "96" for 96 Base I/O
 - 4 Optional Ethernet
 - 0 - Standard
 - E - Ethernet
- * Note: Junior & Nano do not have Ethernet or RS485 port.*
- 5 Optional Card, "P" for Profibus, "D" for DeviceNet
- Note - Junior and Nano do not have "P" or "D"*

Part Numbers for UTLINK

UT/I/O Link and Accessories	
Part	Description
UT-LINK-CBL	Cable
UT-LINK-RLY	8 of 10 Amp Relays 1 Form C
UT-LINK-EXT	11-pin Extender board

Model Number	PLC Width (W)	PLC Height (H)	PLC Depth (D)
D1050N-X240-0 D1050X-X32X-X	151.01 (5.94")	117.45 (4.62")	69.90 (2.752")
D1050X-X48X-X	217.05 (8.54")	117.45 (4.62")	69.90 (2.752")
D1050X-X64X-X	239.78 (9.44")	141.09 (5.55")	69.90 (2.752")
D1050X-X96X-X	382.04 (15.04")	125.08 (4.92")	69.90 (2.752")

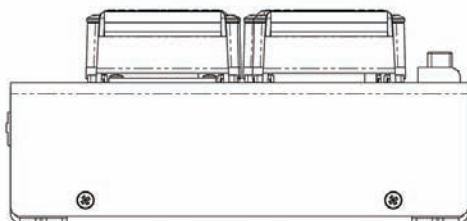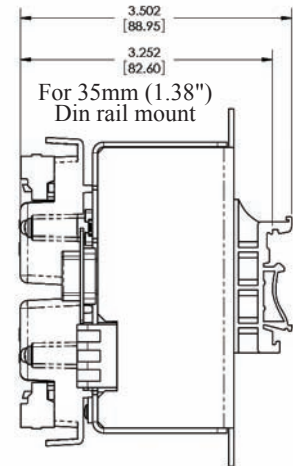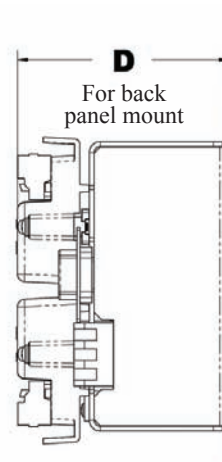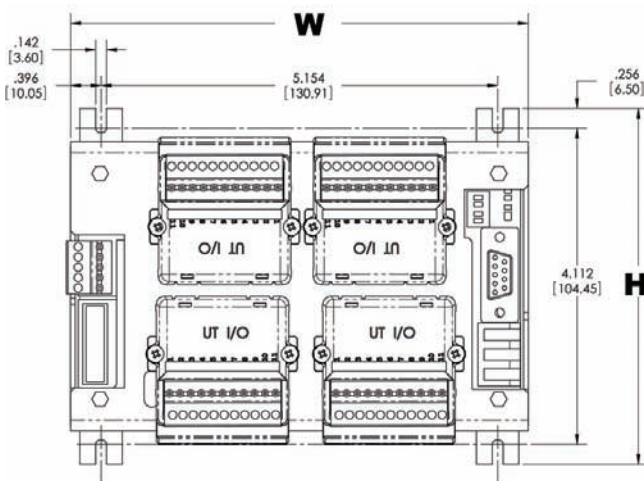

Note - For Electrical, Mechanical and Environmental Specifications check the Specifications Data for respective models